

# Build Your Own Birdfeeder

**1**  
step

Peel all labels off a two-liter pop bottle and clean thoroughly.

**2**  
step

Have an adult drill two 1/8" holes in the bottom of the bottle. Thread wire through one hole and out the other. Twist the ends of the wire together to make a loop for hanging the feeder. Use a small piece of duct tape or caulk to seal the holes so rain can't get into the feeder.

**3**  
step


Drill one 5/16" hole, then drill another 5/16" hole on the opposite side of the bottle. Insert a 5/16" wooden dowel (approximately 8" in length) through the holes. Repeat the procedure so that another perch is added 1/2" above the first (the second perch should cross over the first.)

**4**  
step

Make 1/4" by 1/8" slots 1 1/2" above the perches.

**5**  
step

Remove cap from bottle and fill feeder with Premium Wild Delight® bird food. Replace cap and hang in a location where you can enjoy the variety of birds attracted.

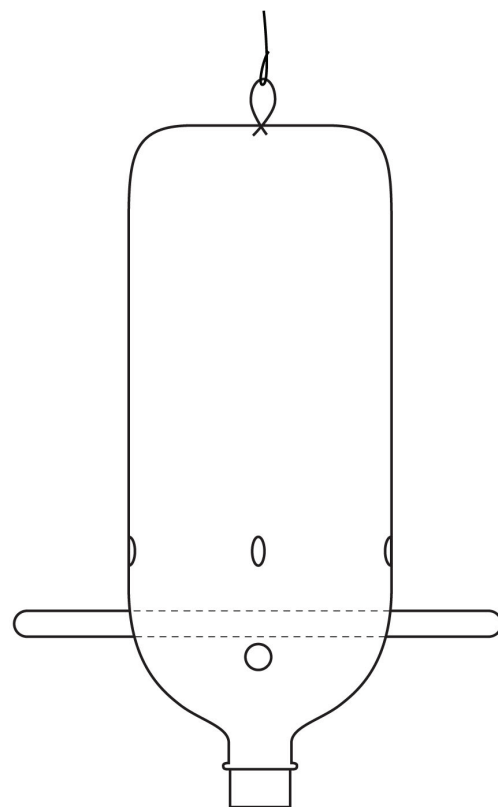

**KIDS  
KORNER™**



[www.betterbirdfood.com](http://www.betterbirdfood.com)